

Product information presented here reflects conditions at time of publication. Consult factory regarding discrepancies or inconsistencies.



MAIL TO: P.O. BOX 16347 • Louisville, KY 40256-0347  
SHIP TO: 3649 Cane Run Road • Louisville, KY 40211-1961  
TEL: (502) 778-2731 • 1 (800) 928-PUMP • FAX: (502) 774-3624


Visit our web site:  
[www.zoellerpumps.com](http://www.zoellerpumps.com)



## OIL SMART® QUICK MOUNT BRACKET FLOAT TREE & RETROFIT INSTALLATION INSTRUCTIONS


- To install the Oil Smart® Float Tree snap a 1 1/2" PVC pipe into a Quick Mount Bracket. Align PVC pipe vertically and mark the hole positions. If mounting to concrete, drill 1/4" diameter anchor holes 1" deep. Place the screw anchors in the drilled holes. For PVC Risers use a 1/8" diameter drill and mount the Quick Mount Bracket using the washers and screws provided.
- Glue the PVC Cap onto the top end of the 1 1/2" PVC pipe and snap the pipe into the bracket (See Figure 1).
- Mount pump switch and alarm switch to Quick Mount Brackets as shown in Figure 1, with screws and nuts provided.
- Snap each bracket in place at desired height and install a hose clamp just below the Quick Mount Bracket (See Figure 1). For the Oil Smart® Pump Switch, position the end of the long rod about 2" above the top of the pump. For the Oil Smart® Liquid Alarm Switch, position the sensors about 10" above the on level of the pump switch sensor (See Figure 2).
- Drill a 1/8" Diameter hole in pipe near the PVC Cap for air vent.

**Figure 1**

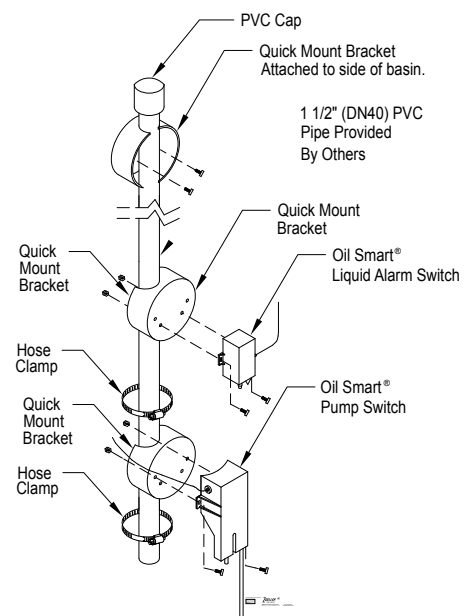

SK2565

**Figure 2**

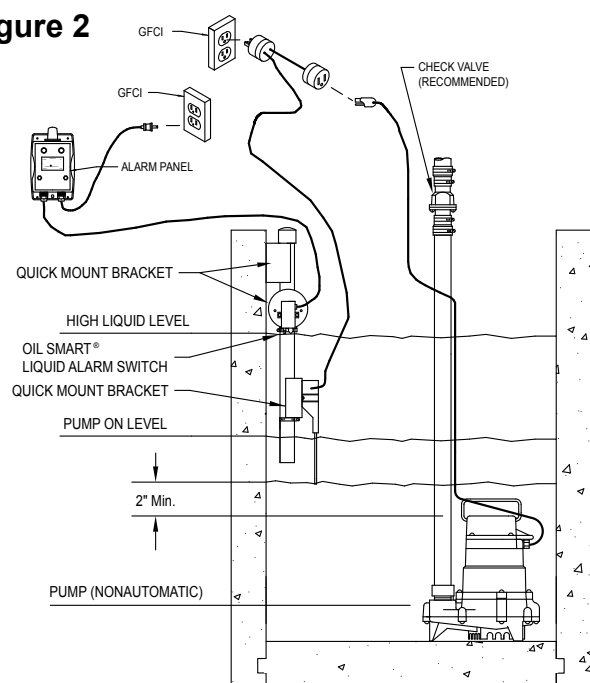

SK2547